

ASSEMBLY MANUAL

NOX MIRROR 200X200

ASSEMBLY KIT


- Assembly Manual QR Code;
- Handling and Cleaning Manual;
- Phillips screw M 5.0x50mm;
- 58 wall plug for masonry.



MDFIX SYSTEM


STEP BY STEP

- 1.** The piece includes a mounting frame, consisting of two beveled rulers and two height gauges. Using a Phillips screwdriver, assemble the mounting frame, placing the height gauges on the rulers, as illustrated in the figure below.

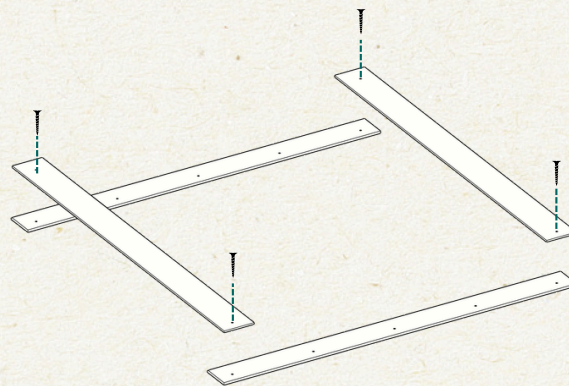


Observation:

Check that the fixing strips are positioned with the chamfered part facing upwards, as illustrated in the detail to the side.

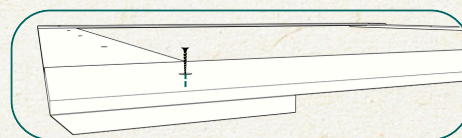


Template Fixing Detail


- 2.** With the mounting frame assembled, drill a hole in the wall using a drill and insert the 8 mm 5 wall plug that comes with the installation kit. Screw the frame together with the beveled side facing up and the raw MDF finish facing the wall, as shown in the diagram.

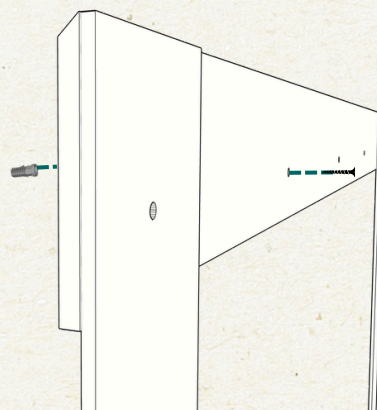

- 3.** Using a level, mark the additional points on the wall, drill the holes, and finish attaching the frame.

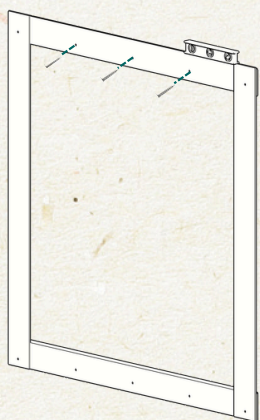


- 4.** With the frame mounted on the wall, remove the height template from the beveled boards and fix the remaining holes in the wall.

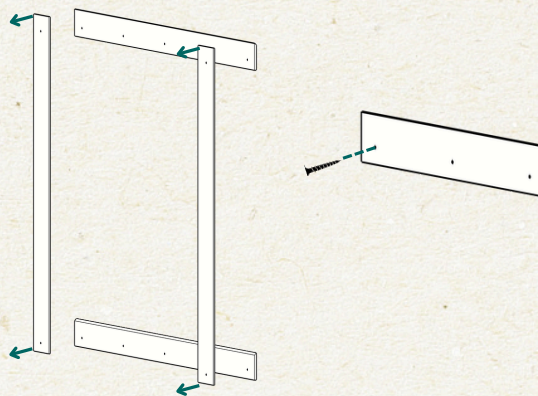

- 5** Carefully insert the first mirror module into the mounting brackets. Then, repeat the same procedure with the second module, as illustrated in the figure below.

The rear frame of the mirror is beveled, designed for mounting.

Slits in the frame serve to make handling the pieces more practical.

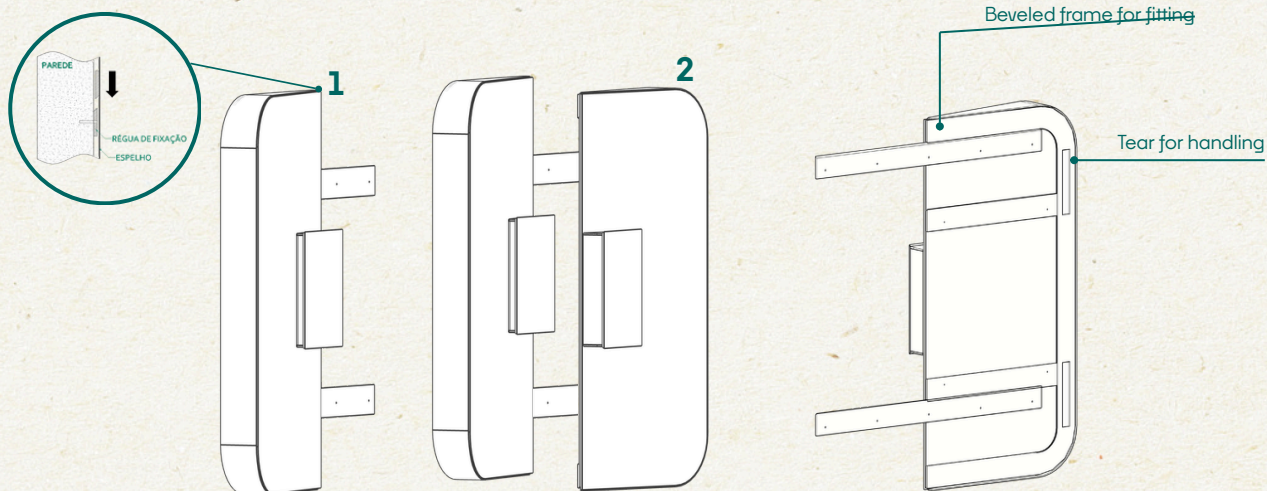

- 6.** Carefully fit the front mirror onto the strip attached to the front of modules 1 and 2, repeating the previous process.

