

ASSEMBLY MANUAL

CORK SIDE TABLE



IMPORTANT INFORMATION BEFORE STARTING ASSEMBLY:

Do not place the glass on unprotected hard surfaces, e.g., ceramic floors, iron, etc., as this may cause it to crack.

We recommend that the parts be screwed on carefully, only until they are secure, without the need for excessive pressure or tightening.

ASSEMBLY KIT


- Assembly Manual QR Code;
- Handling and Cleaning Manual.
- 5/16" Allen screw

STEP BY STEP


1. Screw the Allen screw into one end of the rod.



2. Screw the other screw in so that it goes through the glass and engages with the threads of the wall plug, as shown in the figure below.

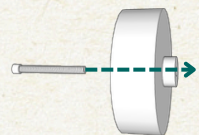

3. With the glass base in place, screw the rod into the marked location, as shown in the figure below.

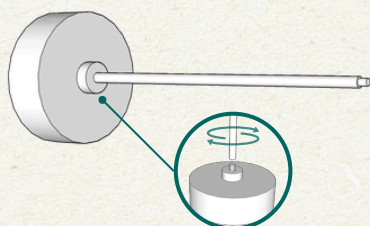

4. Screw the cap onto the top of the stem until it is secure, as shown below.

