


ASSEMBLY MANUAL

OFFSET SIDEBOARD

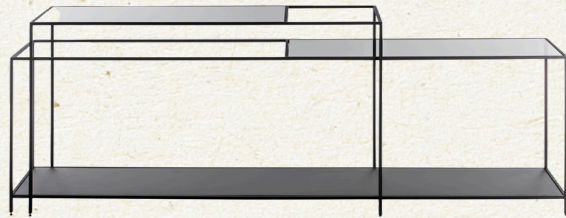

IMPORTANT INFORMATION BEFORE STARTING ASSEMBLY:

The assembly must be carried out by at least 2 people.

Do not place glass panes on unprotected hard surfaces, such as ceramic floors, iron, etc., as they may crack.


Small gaps between the metal and the glass are normal, as they allow for the assembly of the piece!

ASSEMBLY KIT


- Assembly Manual QR Code;
- Handling and Cleaning Manual;
- PVC wedges;
- Leveling foot.

STEP BY STEP

1. Position the metal frame in the desired location. Level it if necessary by rotating the leveling feet. Place the PVC wedges as shown in the image below.

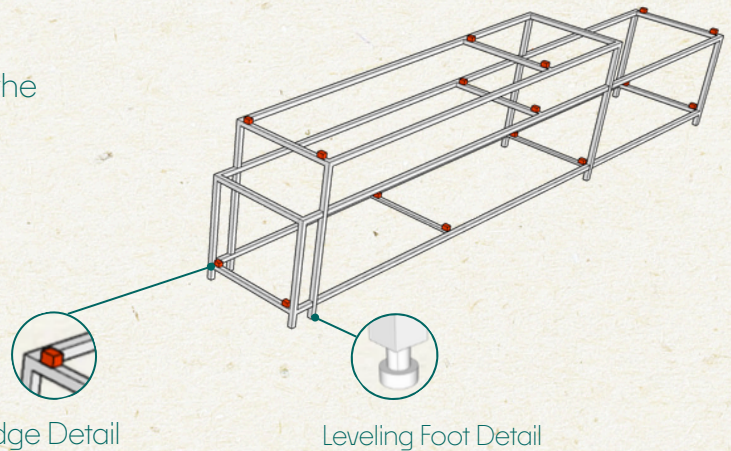

- 2.** Place the bottom glass pane along the side of the metal frame, as shown in the figure below.

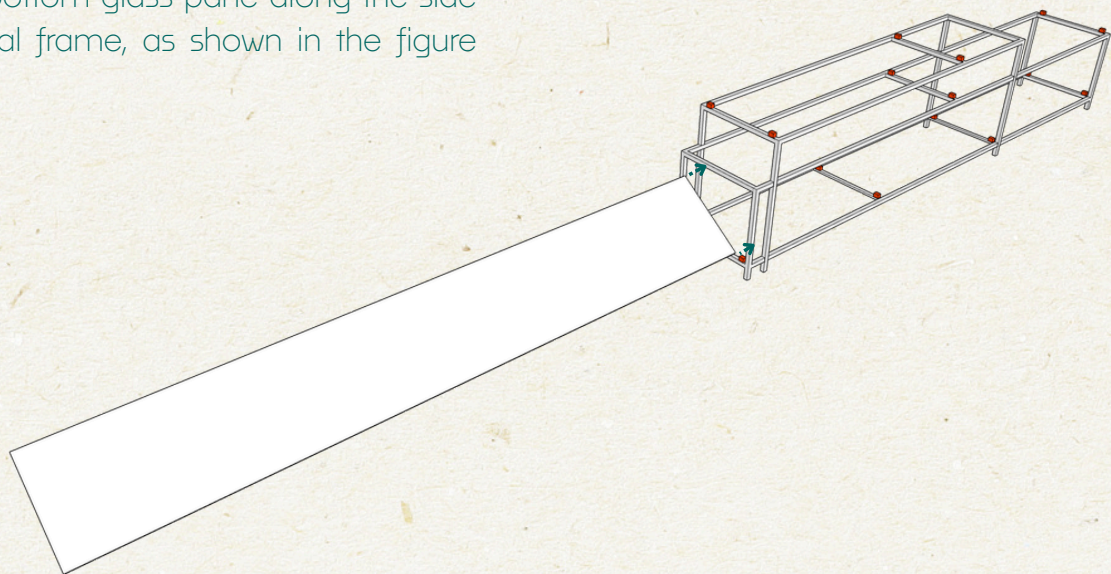

- 3.** Place the middle and top glass panes as shown in the figure below.

