


ASSEMBLY MANUAL

KARDEC SIDEBOARD

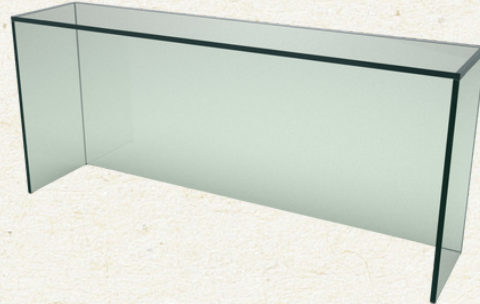

IMPORTANT INFORMATION BEFORE STARTING ASSEMBLY:

The assembly must be carried out by at least 2 people.


Do not place glass panes on unprotected hard surfaces, such as ceramic floors, iron, etc., as they may crack. The base already comes with fixed feet; if there are any uneven areas, lightly sand the nylon of the foot to level it.

ASSEMBLY KIT

- Assembly Manual QR Code;
- Handling and Cleaning Manual.
- PVC wedges.

STEP BY STEP

1. Position the bottom base in the desired location, leveling it if necessary. Place the PVC shims as shown in the adjacent figure.

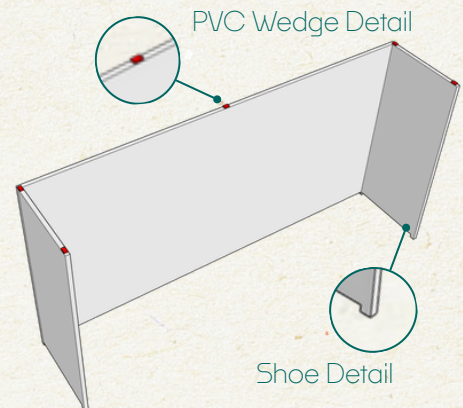

2. Support the tabletop on the base, ensuring it is level on all sides. Use extra PVC shims for leveling, if necessary.

