


ASSEMBLY MANUAL

KARDEC SIDEBOARD WITH SHELF

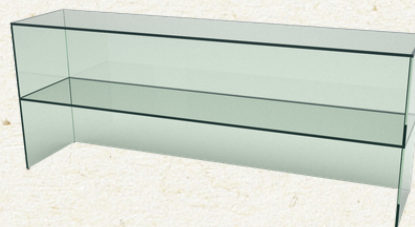

IMPORTANT INFORMATION BEFORE STARTING ASSEMBLY:

The assembly must be carried out by at least 2 people.

Do not place glass panes on unprotected hard surfaces, such as ceramic floors, iron, etc., as they may crack.

The base already comes with fixed feet; if there are any uneven areas, lightly sand the nylon of the foot to level it.


ASSEMBLY KIT

- Assembly Manual QR Code;
- Handling and Cleaning Manual.
- PVC wedges.

STEP BY STEP

1. Position the bottom base in the desired location, leveling it if necessary. Place the PVC shims as shown in the adjacent figure.


PVC Wedge Detail

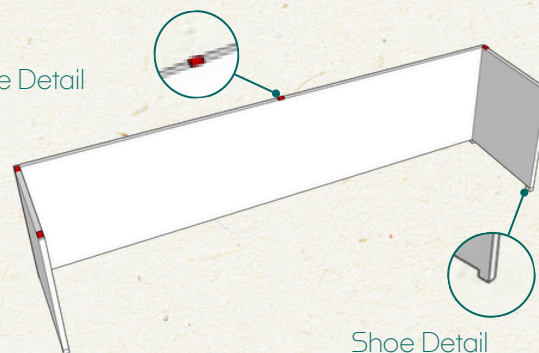


Shoe Detail



- 2.** Support the shelf on the base, ensuring it is level on all sides. Use extra PVC spacers for leveling if necessary.
Place the PVC wedges on the shelf, aligning them with the others already in place.

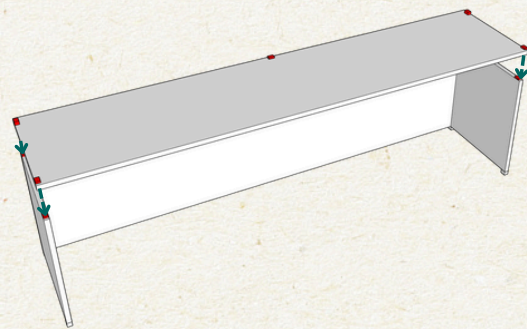

- 3.** Position the top base in alignment with the bottom assembly.
Place the PVC shims on the glass, aligning them with the other shims already in place.

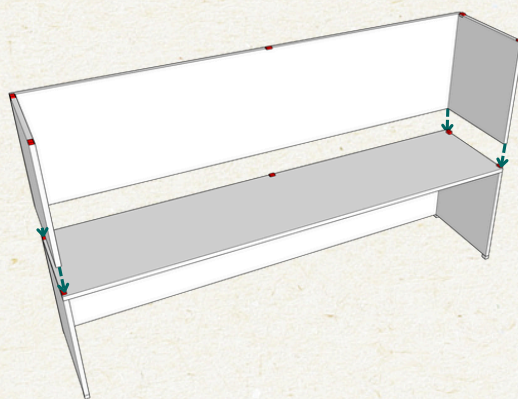

- 4.** Support the tabletop on the base, ensuring it is level on all sides. Use extra PVC shims for leveling, if necessary.

